



HOT POTATO SPLASH

Ages 5+

Players 2+

Contents: Hot Potato Splash, 3 LR44 batteries

GAME PLAY: Don't be the player holding the potato when the music stops!

- Players should enter the pool and form a circle.
- Squeeze the potato to start the music. (Note: There is no On/Off switch. Squeeze the potato to wake it up for play. Potato goes to sleep automatically to preserve battery.)
- Toss or pass the potato to another player. It doesn't matter if the player is next to you or across the pool!
- The last player to touch the potato when the music stops is out of the game.
- If the music stops while the potato is in mid-air, then the last player to have touched the potato is out.
- Squeeze the potato and start a new round.
- Continue playing the game until only one player is left.
- The last player in the game wins!

BATTERY INFORMATION: Hot Potato Splash runs on three LR44 batteries. (Note: You must replace all three batteries at the same time, never mix old and new batteries)

For battery replacement instructions and safety information, please see the other side of instructions.

REPLACEMENT:

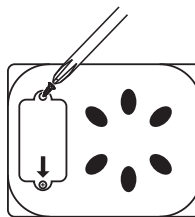


DIAGRAM – 1:

- Open pocket to reveal battery box.
- Remove screws with a Phillip's screwdriver.

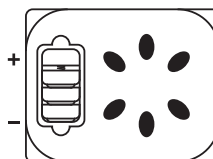


DIAGRAM – 2

- Open the lid and exchange LR44 batteries in the polarity shown.
- Replace the lid and secure the screws.
- Close the pocket.

BATTERY SAFETY INFORMATION

- Never mix old and new batteries (replace all batteries).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always replace all batteries at the same time.
- Alkaline batteries are recommended for best performance.
- Rechargeable batteries are to be removed from the toy/game before being recharged.
- Rechargeable batteries are only to be recharged under adult supervision.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- Supply terminals are not to be short-circuited.
- Dispose of batteries safely (Do not dispose of batteries in fire, batteries may explode or leak).



©2010 Fundex Games, Ltd.

P.O. Box 421309 • Indianapolis, IN 46242 **MADE IN CHINA**

Questions or comments? Write to us at the address above,

call 1.800.486.9787 or email customerservice@fundexgames.com www.fundexgames.com

Item No. 8461

8461-02-37