



REAL MONEY ATM BANK

5+

ATM INSTRUCTIONS Your new ATM works just like a real Bank Machine! Use your bank card to access your account or unlock the vault. Saving money is easy! Your ATM card activates the machine – insert the ATM card and press the default password – 1,2, 3 and ENTER. If you want to change the password, press the C button and 1 button (together) for 5 seconds, then you can input a new password.

INSTALLING OR REPLACING THE BATTERIES: The battery compartment is located on the back of the ATM. The ATM requires 2 x 'AA' batteries (INCLUDED). Using a phillips-head screwdriver, loosen the screws of the battery compartment located on the back of the door. Remove the battery cover from the ATM carefully. Install 2 x 'AA' batteries into the compartment, being careful to match the polarity as indicated (+ and -). Replace the cover over the compartment and tighten the screws. If the ATM does not work properly, the lights dim, or the sound is weak replace the batteries. NOTE: The bank will automatically turn off if it is not used for 30 seconds.

DEPOSITING COINS: Insert a coin into the coin slot on the ATM. The amount deposited will appear on the display.

DEPOSITING CURRENCY: Carefully fold your currency to a size that fits into the currency slot. Insert the currency and press the DEPOSIT button. Now press the button which identifies the value of the bill. Press the ENTER button after you enter the deposit value.

ACCIDENTAL DEPOSIT: If you accidentally enter the wrong amount but have not yet pressed the ENTER button, simply press the CLEAR button to clear the data. But, if you have already pressed the ENTER button, you will need to withdraw the wrong amount from the ATM bank.

OPENING THE VAULT AND MAKING A

WITHDRAWAL: To withdraw money from your ATM insert your ATM card into the ATM card slot to open the door. Remove the money you would like to withdraw and press the WITHDRAW button. Enter the amount you withdraw and press ENTER.

CHECKING YOUR BALANCE: Press the BALANCE button and your current balance will be displayed on the screen.

- To clear the account balance to zero or reset the ATM press the RESET button next to the battery door.
- Keep your ATM bank clean and dry. If part of the bank gets wet wipe it dry immediately. Use and store the bank indoors, in environments which maintain normal temperatures.
- Handle the ATM carefully and do not drop it.
- Occasionally wipe the ATM with a damp cloth to keep it clean and looking new.
- Modifying or tampering with the ATM's internal components can cause it to malfunction and will void any warranty.

⚠ BATTERY CAUTION:

READ AND SAVE THESE INSTRUCTIONS.

- Insert batteries with correct polarity as shown.
- Remove exhausted batteries from the toy.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not charge non-rechargeable batteries.
- Rechargeable batteries are to be charged under adult supervision only.
- Remove rechargeable batteries before charging.
- Do not mix old and new batteries.
- Do not mix standard (carbon-zinc), alkaline, or rechargeable batteries.
- Do not short circuit supply terminals.
- Remove batteries from product before extended storage.

Dispose batteries according to local, state or federal laws.

2 AA batteries included.



ZILLIONZ®
A Member of the Alex Brands® Family
4280 S. Haggerty Road, Canton, MI 48188, USA

alexbrands.com

No. 0T3011106