


**BACKYARD
SAFARI
ADVENTURES**

SETTING YOUR WATCH

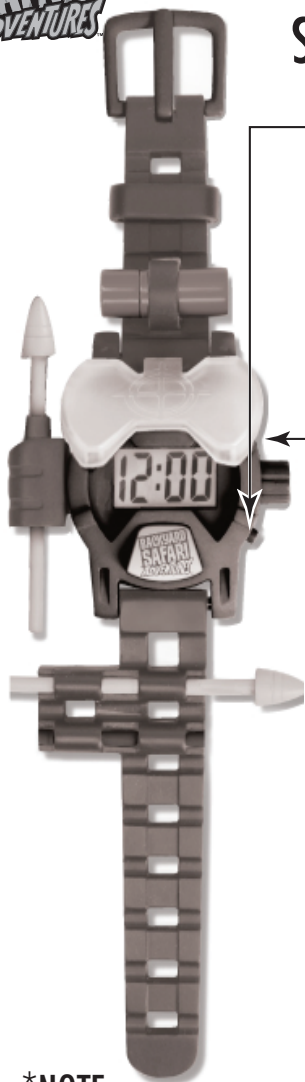

1. Repeatedly push the button to change the month, date, hour (A)a.m. or (P)p.m. or minute.
2. Repeatedly push the button to SET the
month
date
hour (A)a.m. or (P)p.m.
or minute.
3. Push top button only to toggle between time, date and the second counter.
4. Using the second counter:
 - A. Push top button and toggle to the second counter.
 - B. Push and hold the bottom button and reset to
 - C. When ready release for up to a 60 second countdown.
 - D. Push top button when done.

* **NOTE** On some watches you may have to push the bottom button very hard.

OT2483208TL © 2014 Backyard Safari: 4280 S Haggerty Road Canton, MI 48188



BACKYARD SAFARI™
A Member of the Alex Brands® Family
Membre de la famille des marques Alex Brands®
Miembro de la familia Alex Brands®
4280 S. Haggerty Road, Canton, MI 48188, USA
alexbrands.com